


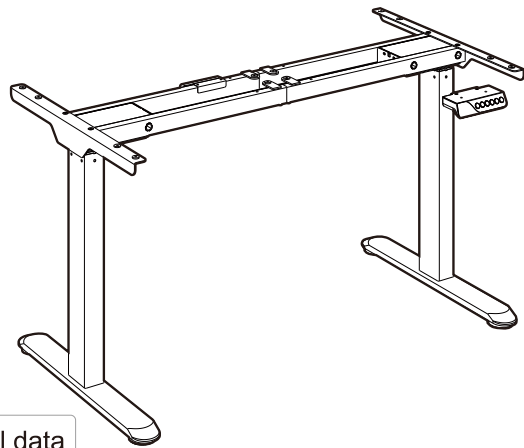

Technical data

Column stage	3
Max. Load Capacity	100KG
Max. Speed	25mm/s
Lowest Height	630mm
Highest Height	1280mm
Applicable Tabletop Size	(1200mm-1800mm)x(600mm-800mm)x25mm

Accessory list

Attention: The drawings below are for guidance only and they may differ slightly from the product and fittings received. Please contact our customer service department if you have any queries.

No.	Image	Spec	Qty
A		M6	8
B		M6	8
C		St4.2	12
D		Cable tie	6
E		St4.2	6
F		Allen Key 4x4mm	1
G		M6	4

The product has been designed to meet Commission Regulation with regard to ecodesign requirements for electric power consumption of Low power consumption mode condition of electrical and electronic household equipment.
The technical information of Low power consumption Lowpower consumption mode condition:

Mode	Power consumption (Watts)	The period(Minutes)
Low power consumption mode condition	≤0.5W	1min

The website URL of the electronic instruction manual:
www.euroseats.nl/gebruikershandleidingen/


Power Supply

Manufacturer: Shenzhen RBD Technology Corporation

Model: GRP-60WM290018-A	Average Active Efficiency: ≥88.0%
Rated Input: 100-240VAC, 50/60Hz ,1.5A	Efficiency at Low Load (10%): 86.36%
Rated Output: 29.0VDC, 1.8A ,52.2W	No-load Power Consumption: ≤0.21 W


Component list

No.	Part	Qty	No.	Part	Qty
①	Feet	2	②	Column	2
③	Side Bracket	2	④	Left Beam	2
⑤	Right Beam	2	⑥	Connection Rod	2
⑦	Power adaptor bracket	1	⑧	AC power cable	2
⑨	Adapter cable	1	⑩	Handset + Power adapter	1
			⑪	Power adapter	1

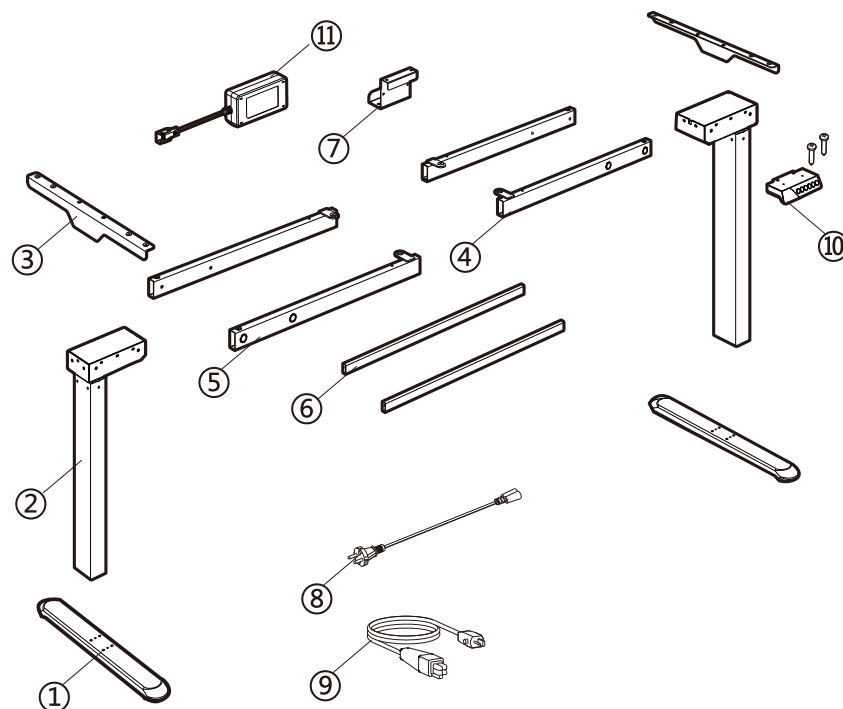

STEP 1

Install the left and right crossbeams

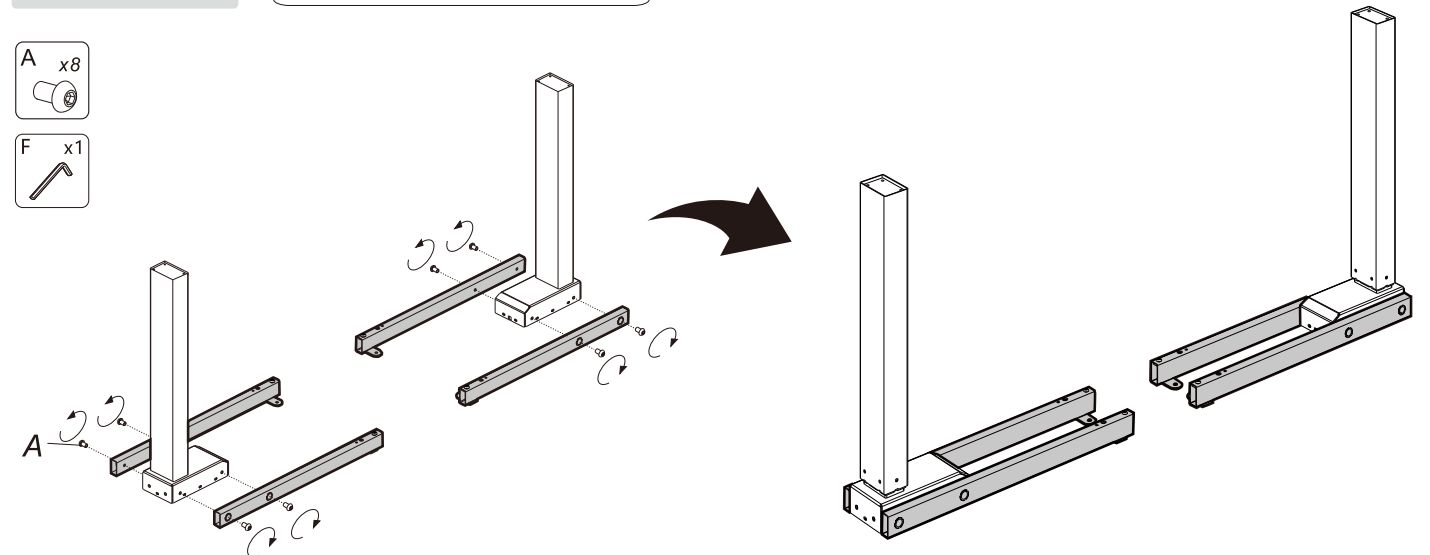


STEP 2

Install the Pedestal




During installation, it is important to prioritize the installation of diagonal screws.

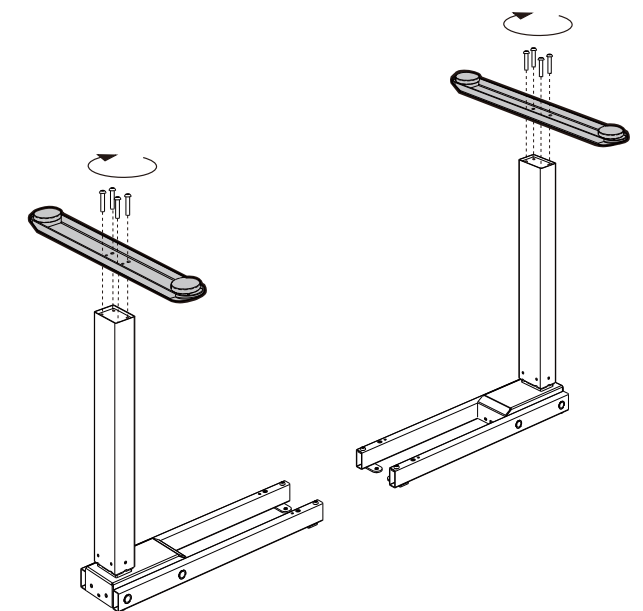


STEP 3

 Install the bracket




Please pre-tighten all the screws for installing the support plate first and then tighten them simultaneously at the end

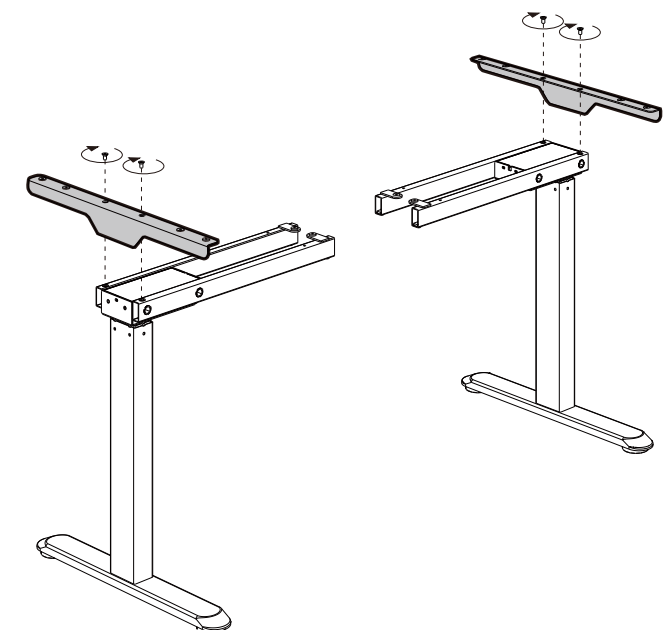


STEP 4

Install the connecting rod

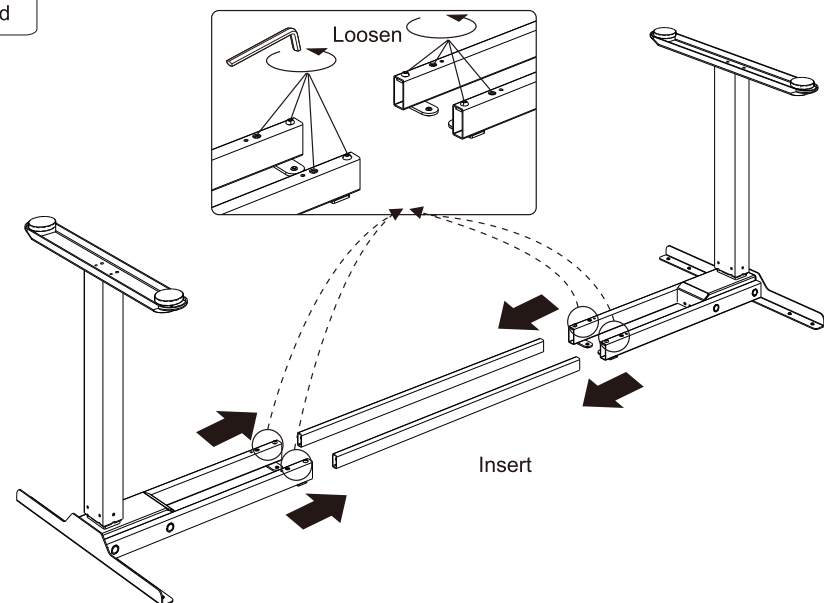

STEP 5


Install the adapter bracket

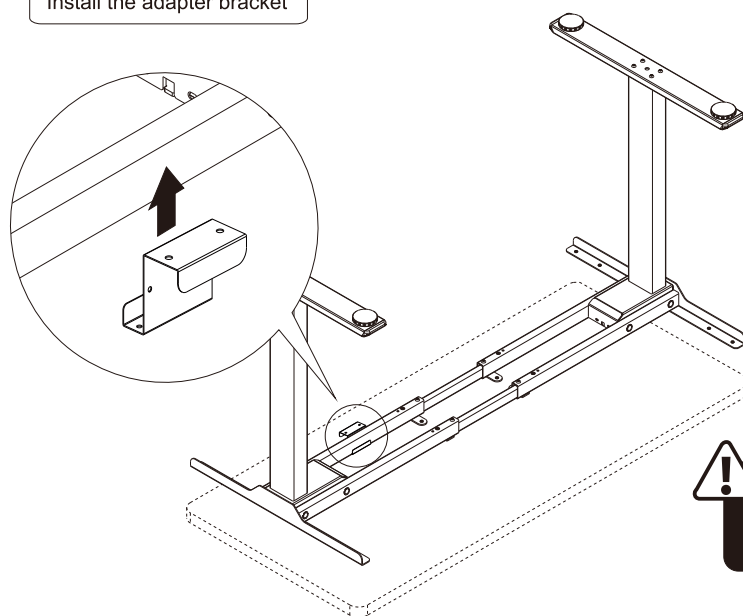



! First, determine the installation position of the handset. The adapter bracket should be on the same side as the handset.

STEP 6


Install adapter

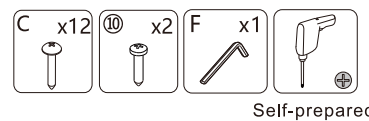

! When stretch the crossbeam, please don't exceed this hole position.

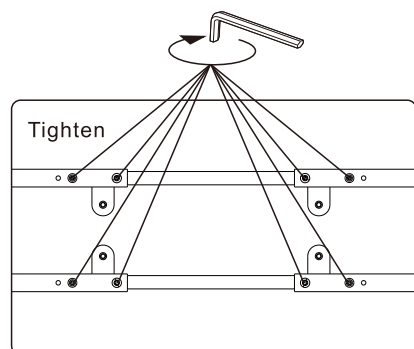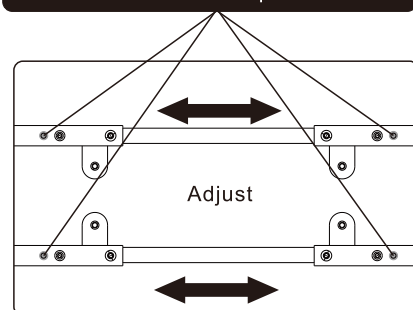


The installation sequence for the screws is ● → ■

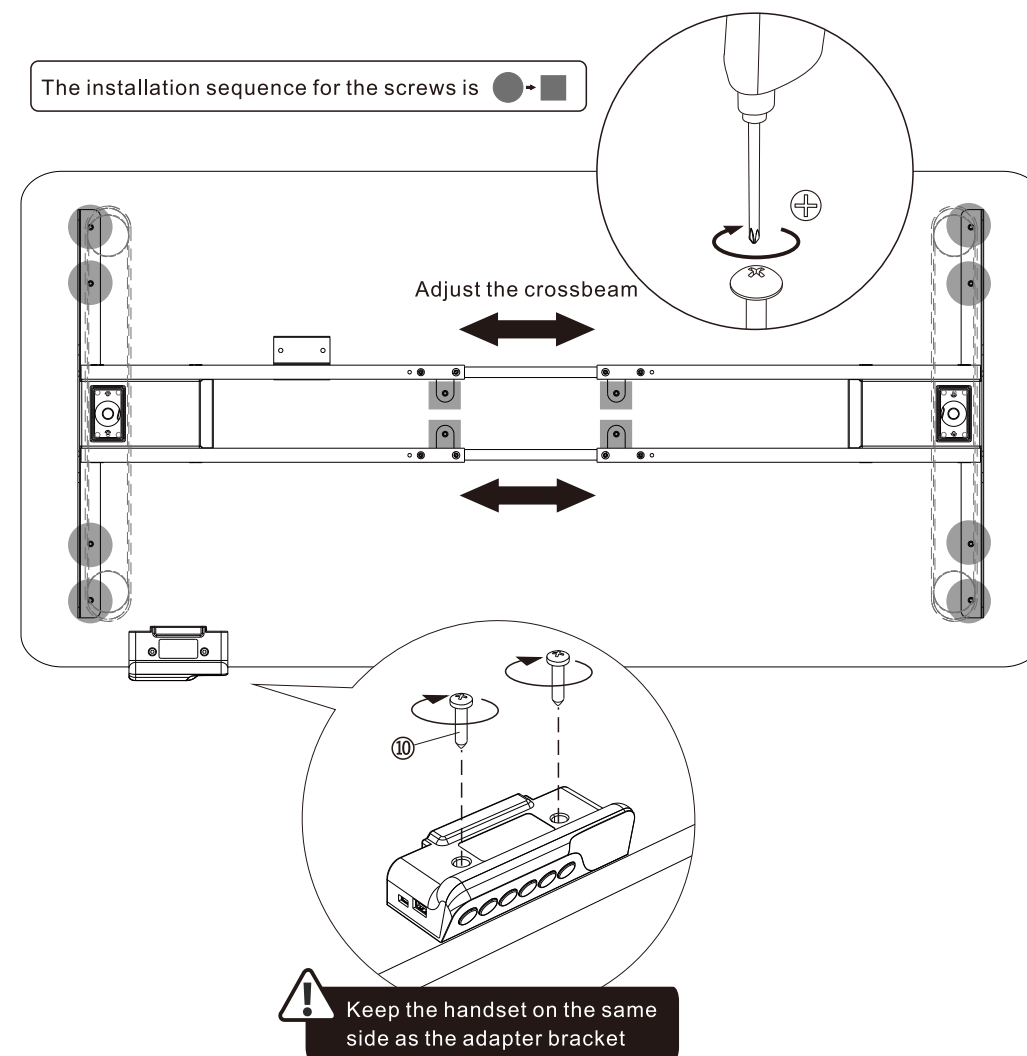

! Keep the handset on the same side as the adapter bracket


STEP 7

Install the adapter

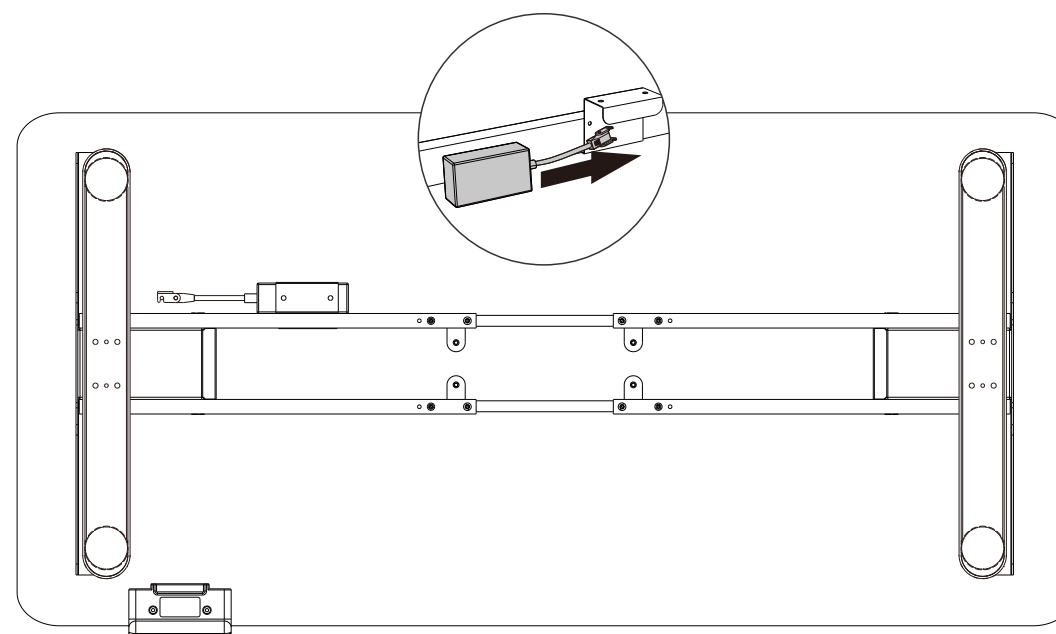


STEP 8

 Connect the cables





Self-prepared

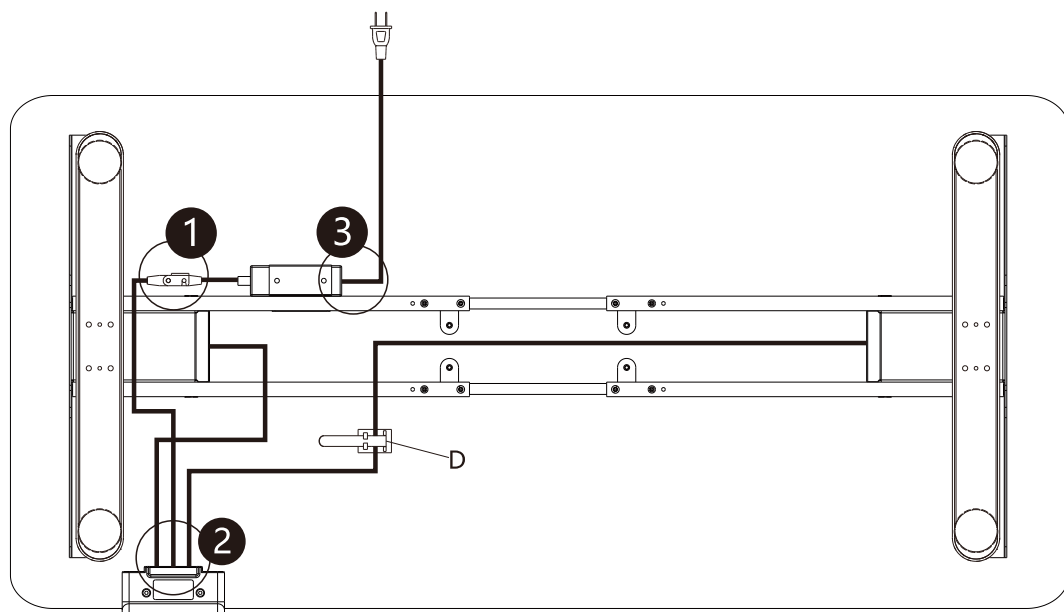


! Connect the power supply after completing the cable connection

1

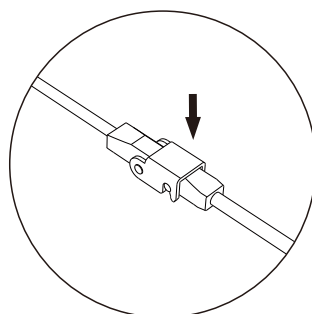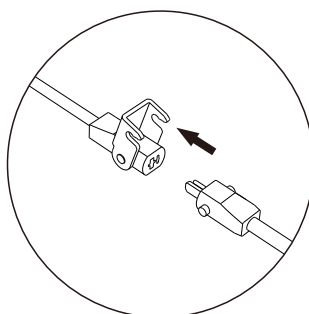


2

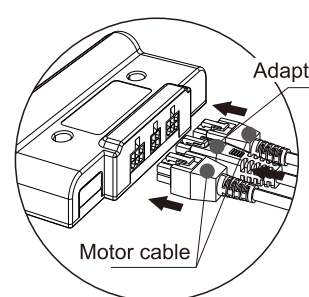

Adapter cable


Motor cable

3

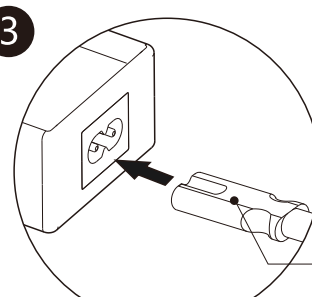


AC power cable


Use Cable clip to secure the various connecting wires to the desktop, keeping the cables tidy.

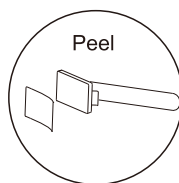

Peel

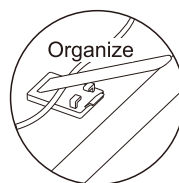


Organize

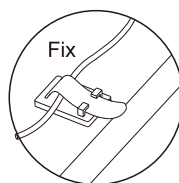


Fix

STEP 9

Flip the table

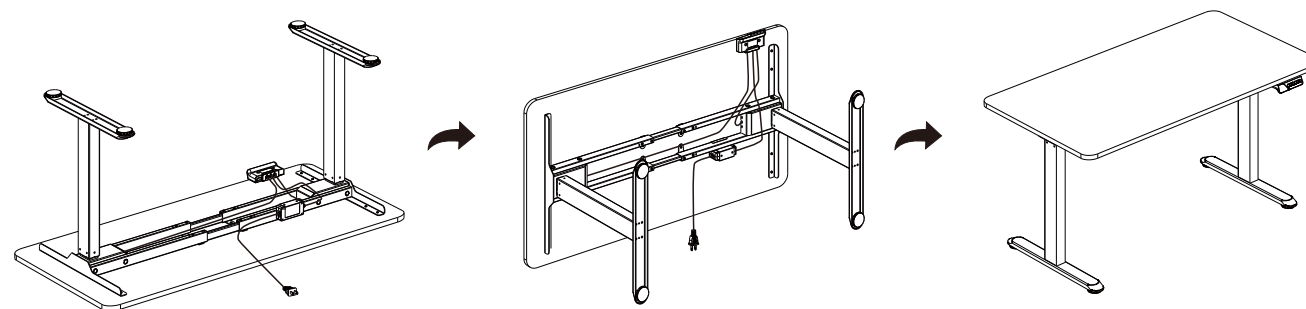

Instructions for using and setting up the handset

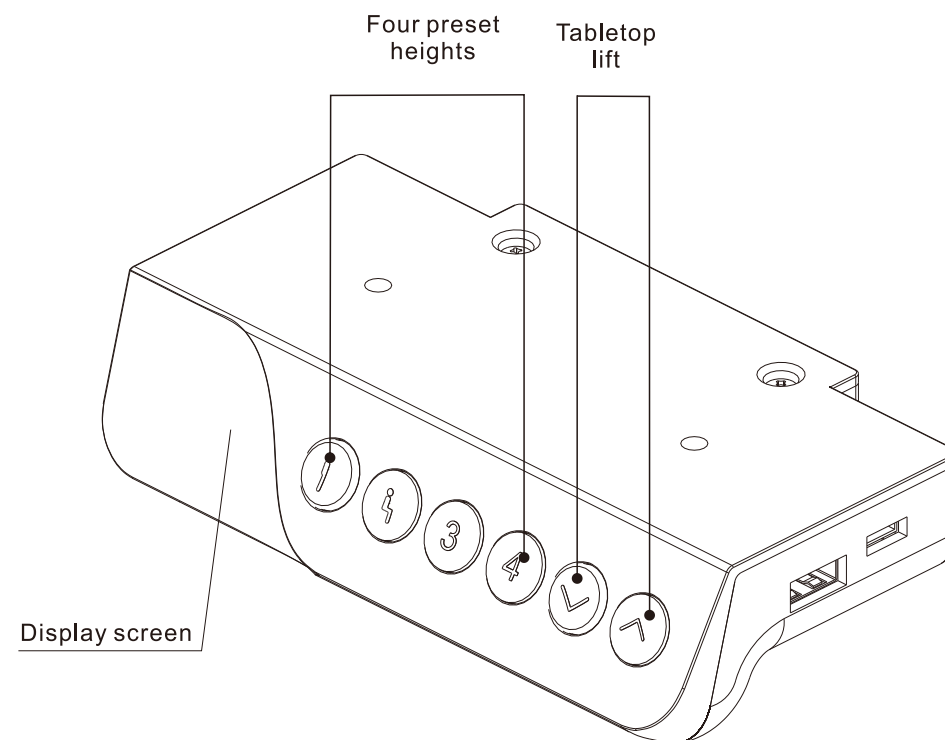


Note

Ensure that there are no obstacles blocking the movement of the table during the lifting process and confirm that all cables are long enough for the table to move up and down.

Suggestion


Set the most comfortable height when sitting as "1" and the most comfortable height when standing as "2". Additional preset heights can be freely set to other heights.

● Height Memory Function

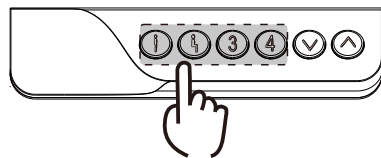

- a. Press and hold the "1" button for 3 seconds, and the screen will display "5-1", indicating that the current height has been successfully saved in memory. Then, you can operate the lifting table to any height, and by pressing the "1" button, it will automatically return to the saved height.
- b. The "1", "3", and "4" buttons also have the same height memory function as the "1" button. By repeating the above steps, you can save the corresponding height in memory. Then, by pressing the respective button, the lifting table will automatically move to the saved height.

● Adjusting Collision Sensitivity (Optional)

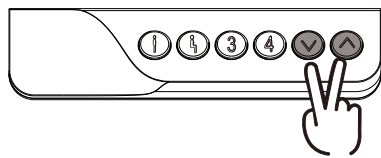



- a. By simultaneously holding down the "A" and "V" keys for 5 seconds, you can switch the sensitivity. One operation will switch to the next level, divided into 4 levels (A-3, A-2, A-1, A-0).
- b. The display screen shows "A-0", indicating that the collision prevention function is turned off.

The display screen shows "A-1", indicating low sensitivity.

The display screen shows "A-2", indicating medium sensitivity.


The display screen shows "A-3", indicating high sensitivity.
- c. When the table encounters an obstacle during the process of ascending or descending, it will immediately rebound, providing protection.

● Reset Function

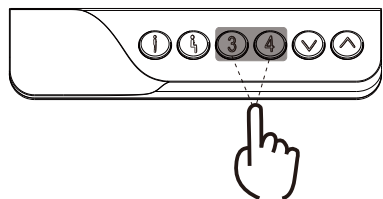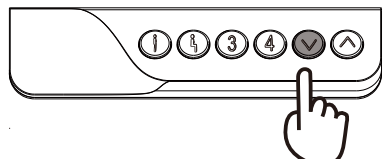


- a. When the display screen shows "r5t", the height-adjustable desk enters the reset state. Press and hold the "V" button until the desk reaches the lowest position and stops rebounding. The display screen will show the height number. Release the downward button "V" to complete the reset process.
- b. When the height-adjustable desk is in a stationary state, simultaneously press and hold the "3" and "4" keys for three seconds to enter the reset mode. Following the above steps will complete the reset process, and it will clear the memorized height settings.

● Error Code Processing

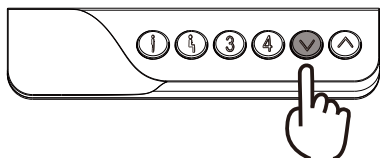

- a. If there are other error codes and pressing the "V" downward key does not respond, please check that the connecting cable is not damaged and properly connected. Disconnect the power for at least 10 seconds, then reconnect it. The screen will display either "r5t". Press and hold the "V" downward key to reset.
- b. If the display shows "E01" or "E02", please allow the table to rest for at least 18 minutes before using it again.
- c. If the desk still does not function properly after performing the above steps, please contact customer service for assistance.

● Button Control for Height Adjustment

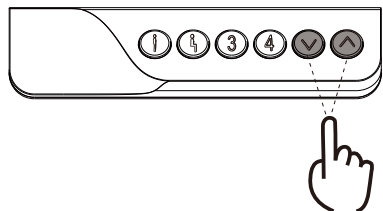

- a. By pressing the "A" or "V" button, you can adjust the height of the lifting table up or down, and the current height will be displayed on the screen.

● Fast charging features

Safety: The product is equipped with built-in over-temperature protection, over-current protection, short-circuit protection, and output interface current limiting protection. These features ensure that the product operates within a normal current range and safeguards against potential hazards.

Compatibility: The product is compatible with mainstream smartphones and laptops available on the market, allowing for fast charging of devices.

● Output parameters

- a. Single USB Type-C port output: MAX 45W, 5V=3A, 9V=3A, 12V=3A, 15V=3A, 20V=2.25A.
- b. Single USB Type-A port output: maximum 18W, 5V=3A, 9V=2A, 12V=1.5A, compatible with huawei FCP/SCP, Samsung AFC protocols;
- c. When both Type-C and Type-A are connected to the device, the output voltage drops to 5V to supply power to the device, with a maximum of 15W.
- d. Note: The charging function will be disabled while the height-adjustable desk is in the process of height adjustment. Once the height adjustment is stopped, the charging function will resume normal operation.

Troubleshooting

This list is used for checking and solving faults and errors. Please contact the manufacturer if problem you encounter is not on the list below.

Problem	Solution
The electronic functions are unable to operate properly	Check the cable connection
Speed of lifting is slow	Check if the load weighs more than 100 kg
The worksurface slides downward	
The device often enters the reset state	
Only descending, not ascending, or only ascending, not descending	Perform a reset operation
Insufficient height for ascending and descending	
The bottom cannot rise	
After exceeding the working duty cycle requirements (Duty cycle: Max 2min on/18min OFF)	Power off for 18 minutes and then reconnect the power
The power module cannot be used	Reset or perform the ascending and descending operation first, then wait for 1 second before using
When pressing the down key, the device goes up instead	Check if there are any obstacles or hanging cables under the table



Attention

- 1.Power supply: AC100V-240V, frequency 50/60Hz.
- 2.Operating environment: Indoor, 0-40° .
- 3.Before cleaning, make sure to unplug the power cord. Use a slightly damp cloth to wipe away surface dust, taking care not to let water drip into the internal components or damage the connection wires. Regularly check if screws are loose and tighten them if necessary.
- 4.The electrical box contains electronic components, metals, plastics, wires, etc. Dispose of it according to the environmental regulations of your country, not as regular household waste.
- 5.Before using the product, carefully inspect and ensure that it has been correctly installed. Use only the accessories provided by the manufacturer for installation. Leave adequate safety clearance when placing the product to avoid pinch hazards.
- 6.Before first use, familiarize yourself with all the functions and program settings of the product.
7. Children are not allowed to play on this product. Certain unpredictable behaviors may result from children playing on the product, and the manufacturer will not be responsible for any resulting accidents.
8. Slight noises from the multi-belt or brake system caused by the structure will not affect the use of the equipment.
9. The use of corrosive or abrasive materials for cleaning equipment is prohibited. Make sure that the cleaning agents used will not contaminate the environment.
10. Operate the equipment only after understanding the relevant hazards. Children under the age of 14 or individuals with physical or sensory impairments or mental disabilities should use the equipment under proper supervision and guidance. Children should not have unattended access to the product.
11. Children should not perform cleaning and user maintenance without supervision.
12. In case of power cord damage, it must be replaced by the manufacturer or relevant professionals to avoid injury.
13. Ensure that your operating environment is free of any potential hazards, such as not littering tools. Always handle packaging materials with caution to avoid various potential dangers, such as the choking hazard posed by children playing with plastic bags.
14. When moving the product, ensure that there are no items placed on the table, the drawers and doors are closed securely, screws are tightened, and the power plug is unplugged. Use at least 2 people for moving. If necessary, keep the original packaging for future transportation.
15. When storing for a long time, unplug the power cord and clean out any loose objects. Store it in a cool and dry place.
16. This product contains small parts that can pose a choking hazard if swallowed accidentally. Keep these small accessories away from children.

Waste disposal



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Euroseats B.V.
Deventerweg 7
3771 NP
Barneveld
Netherlands