



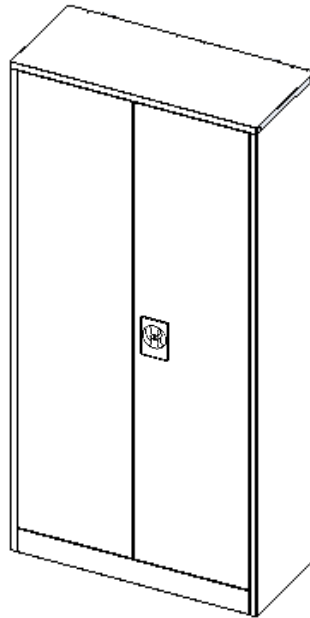





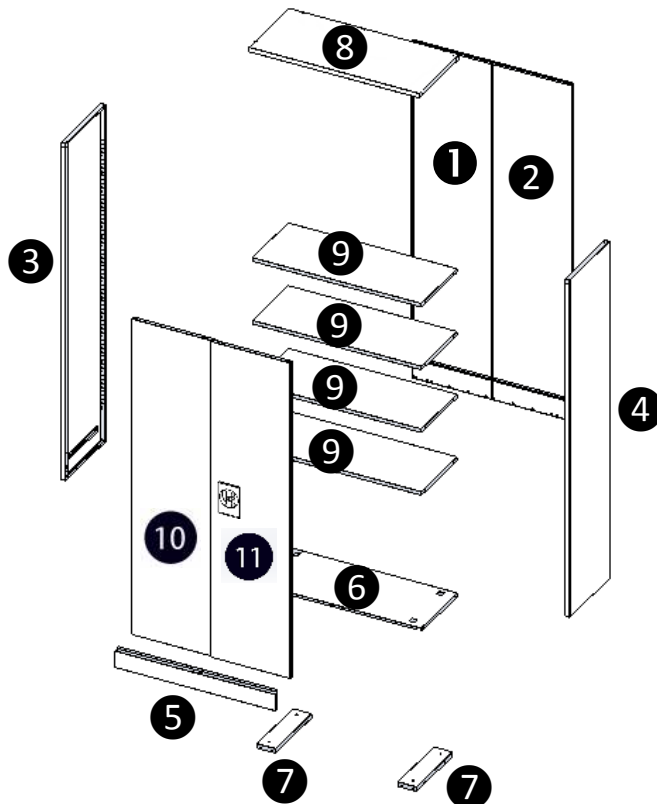



Installation instructions





🕒 15MIN





A  X20 M5X12mm	B  X4 M6X10mm	C  X16 M6X10mm	D  X4	E  X16	F  X2 3mm	G  X2	H  X2	I  M5	J 
---	--	---	---	--	---	---	---	---	---



step 1

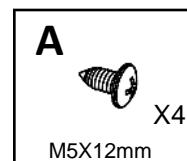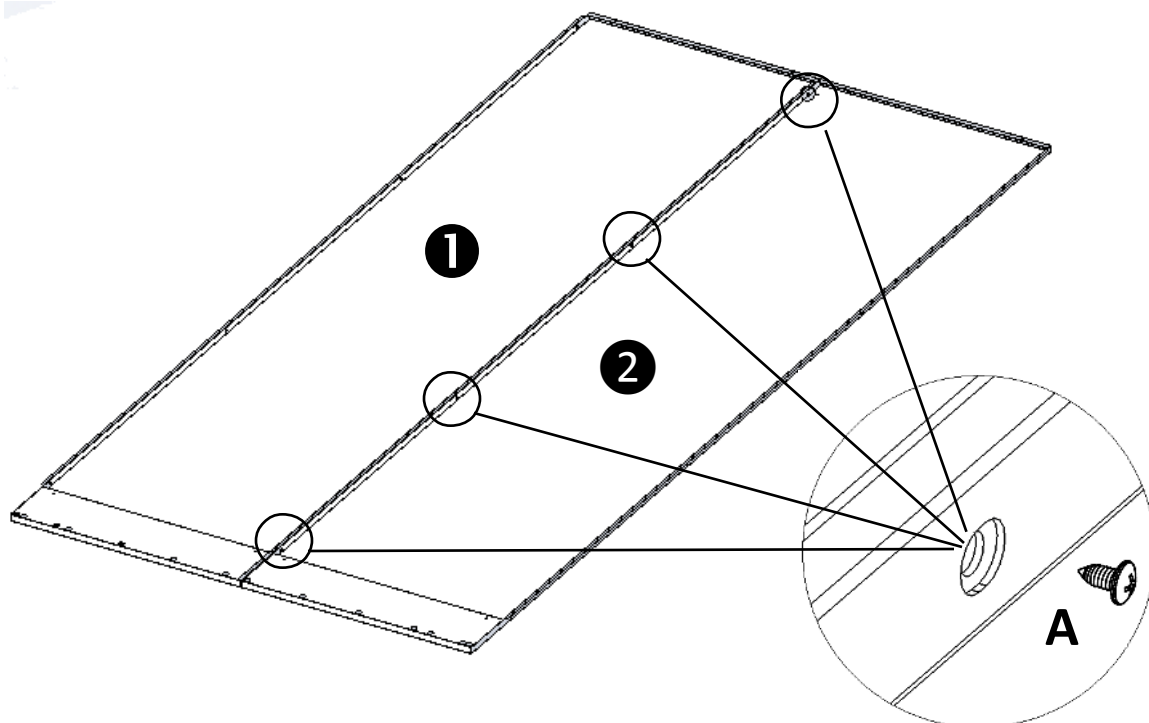



step 2

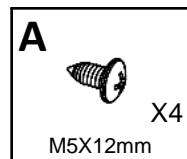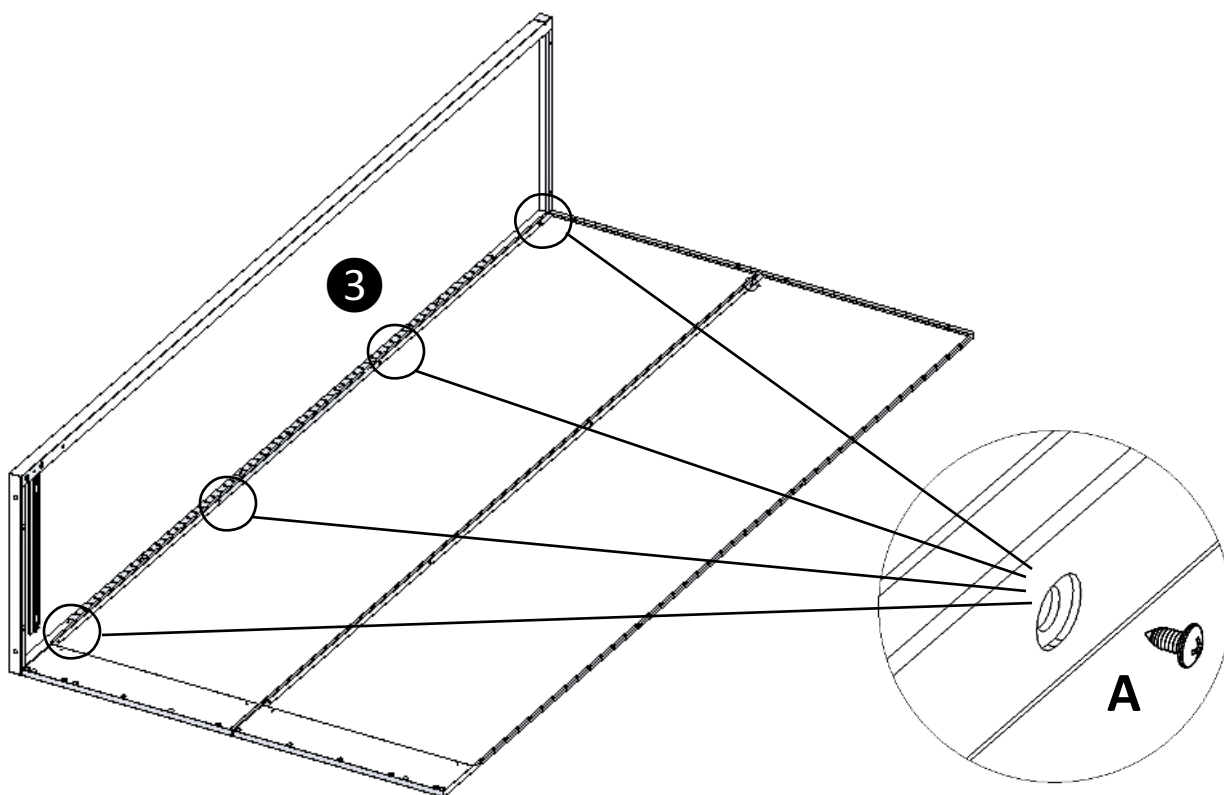


step 3

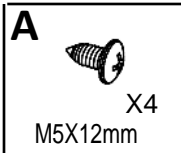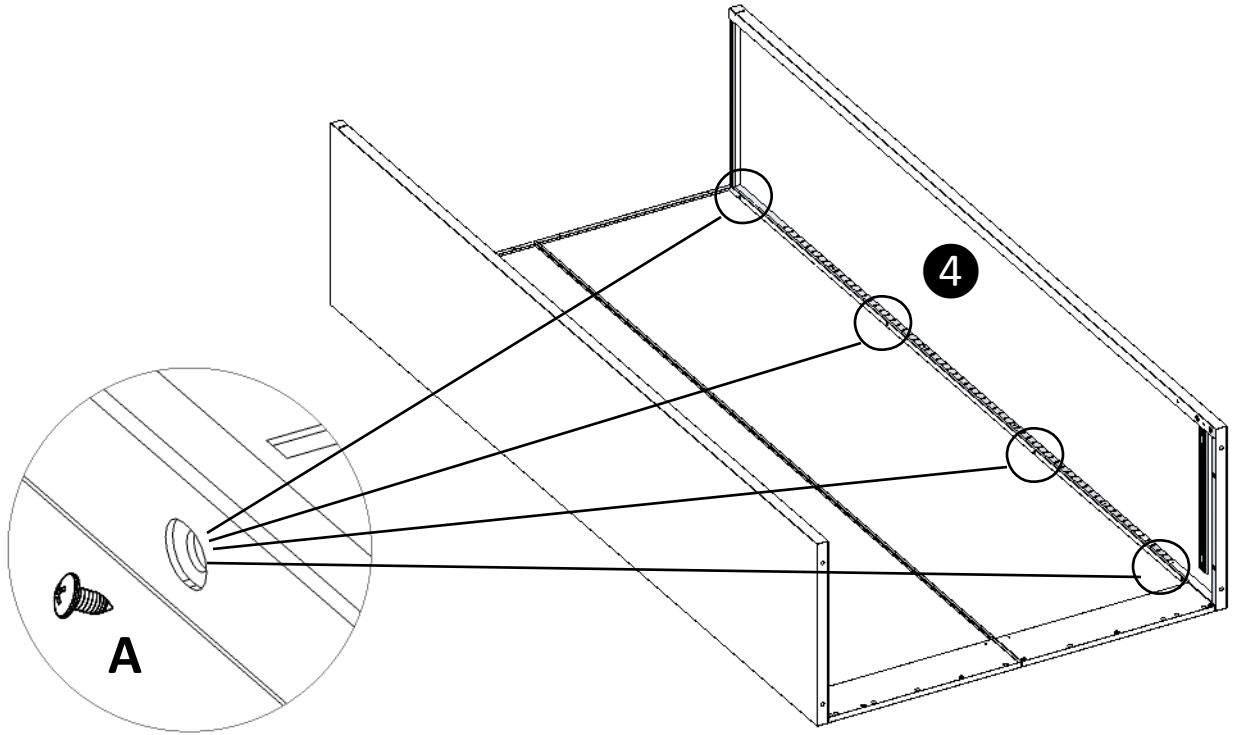

step 4

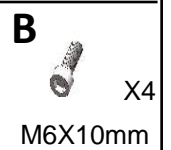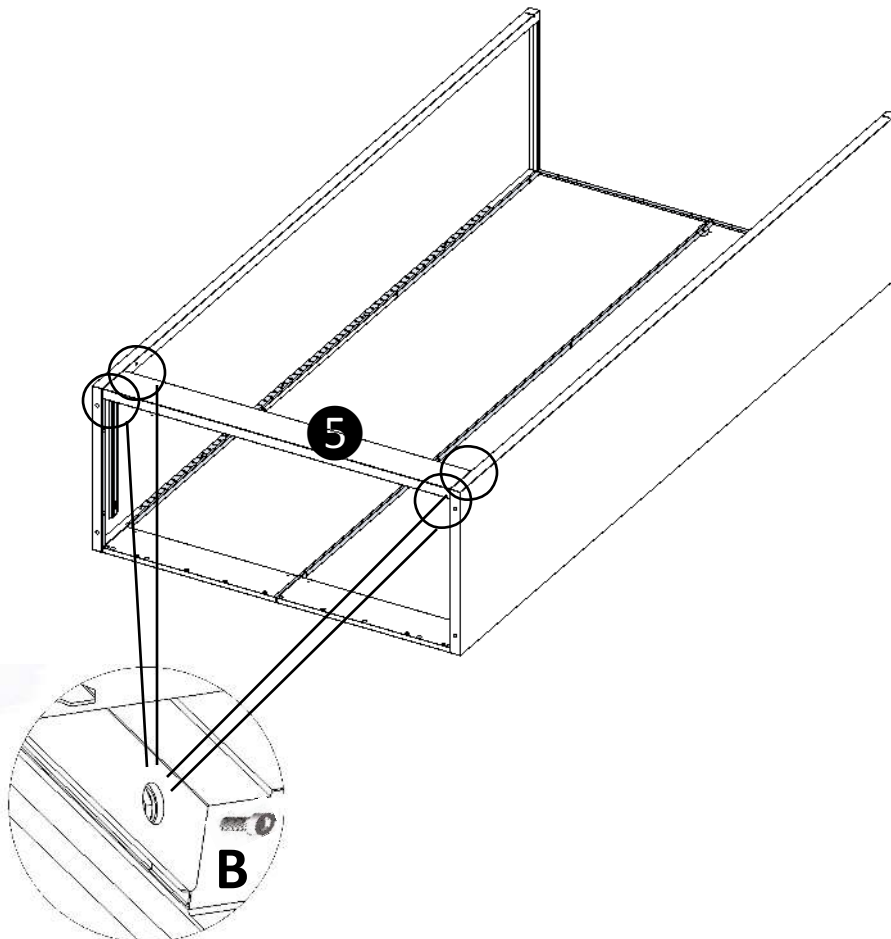


step 5

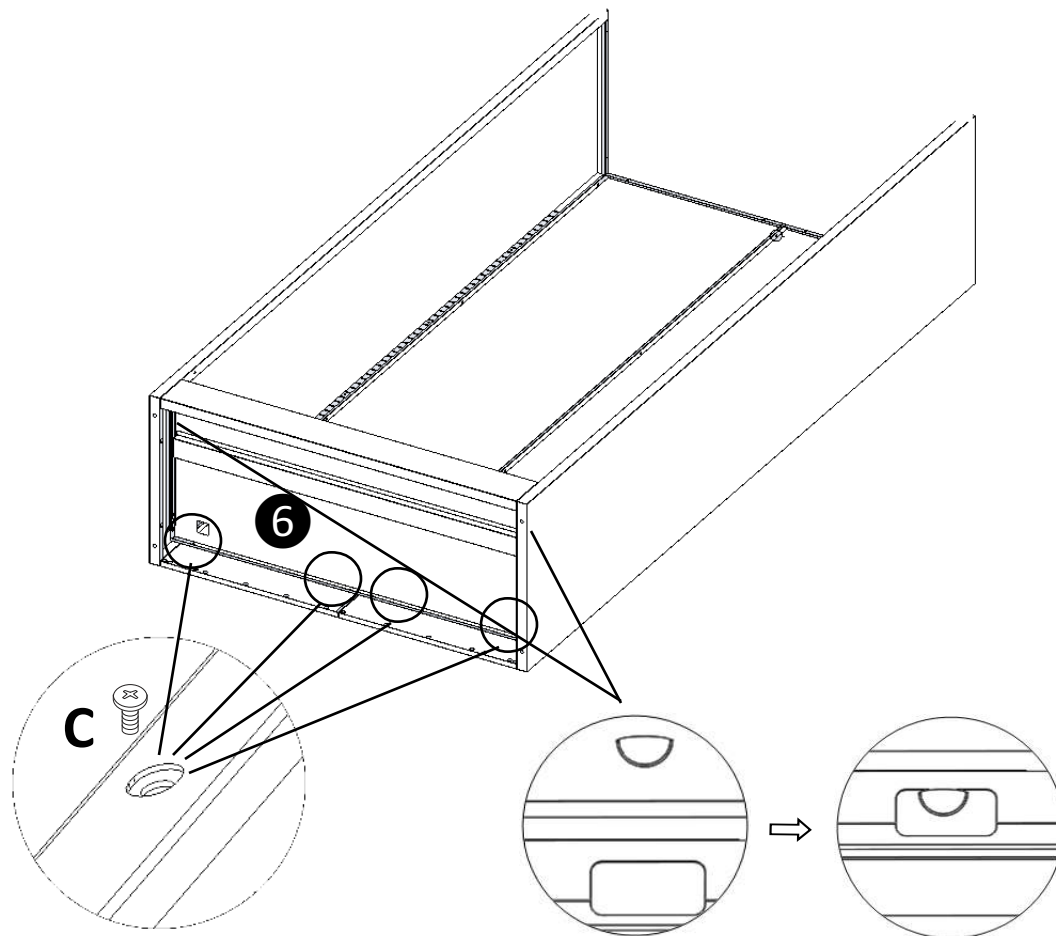



C
X4
M6X10mm

step 6



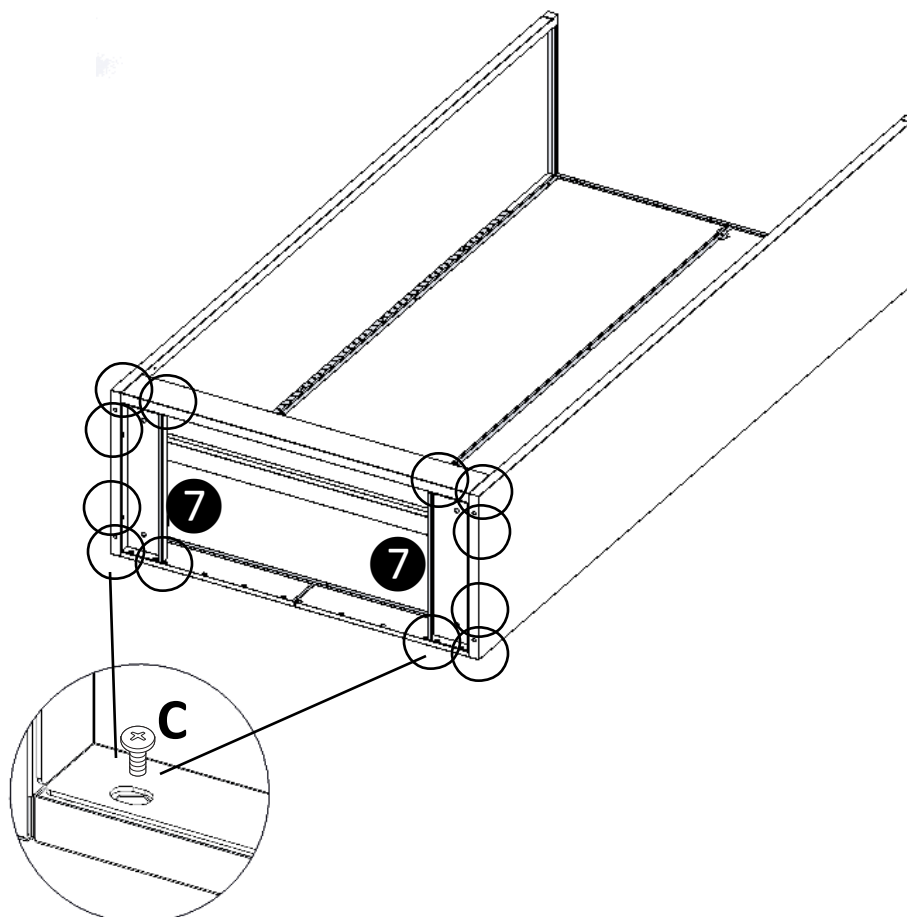


C
X12
M6X10mm


step 7

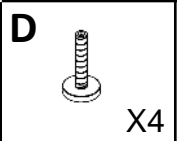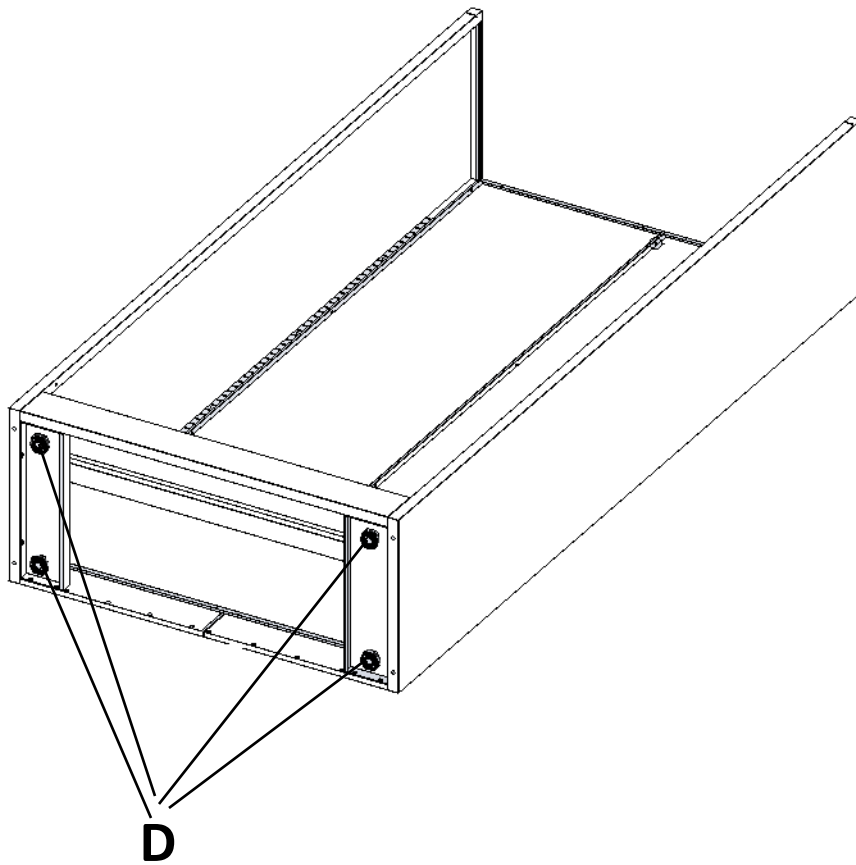


step 8

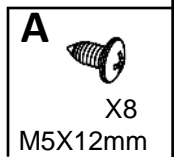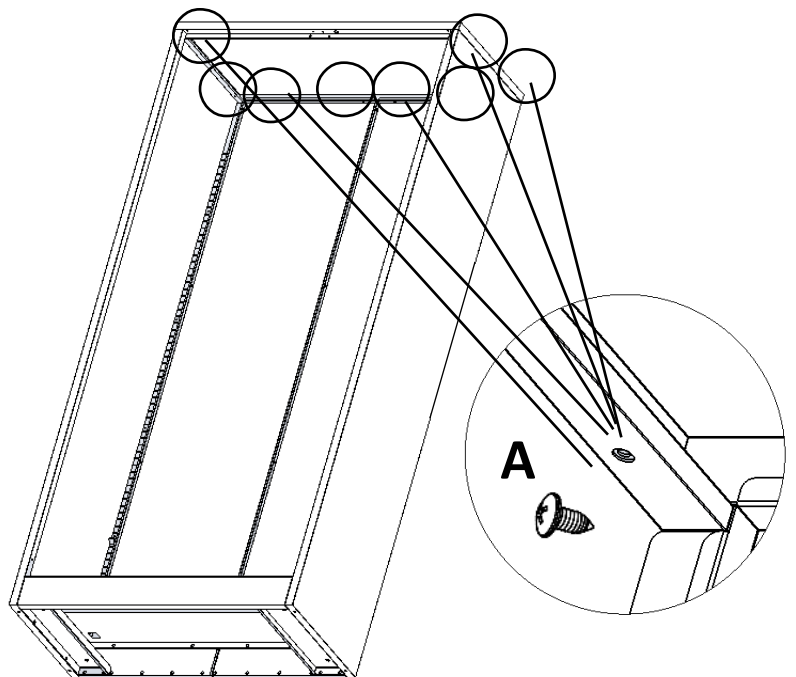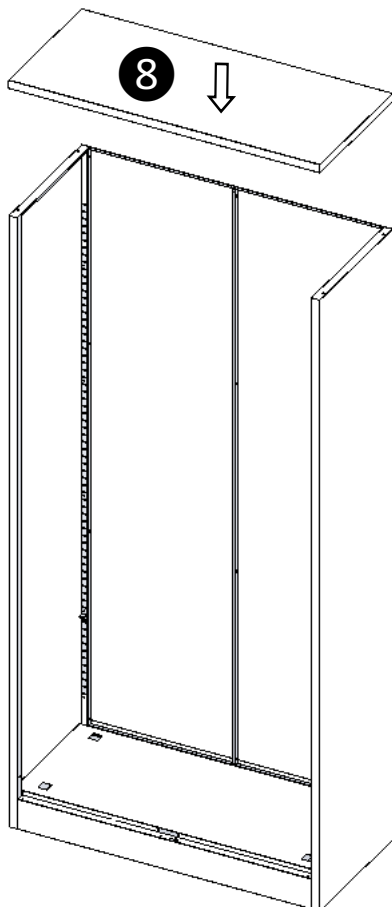

step 9

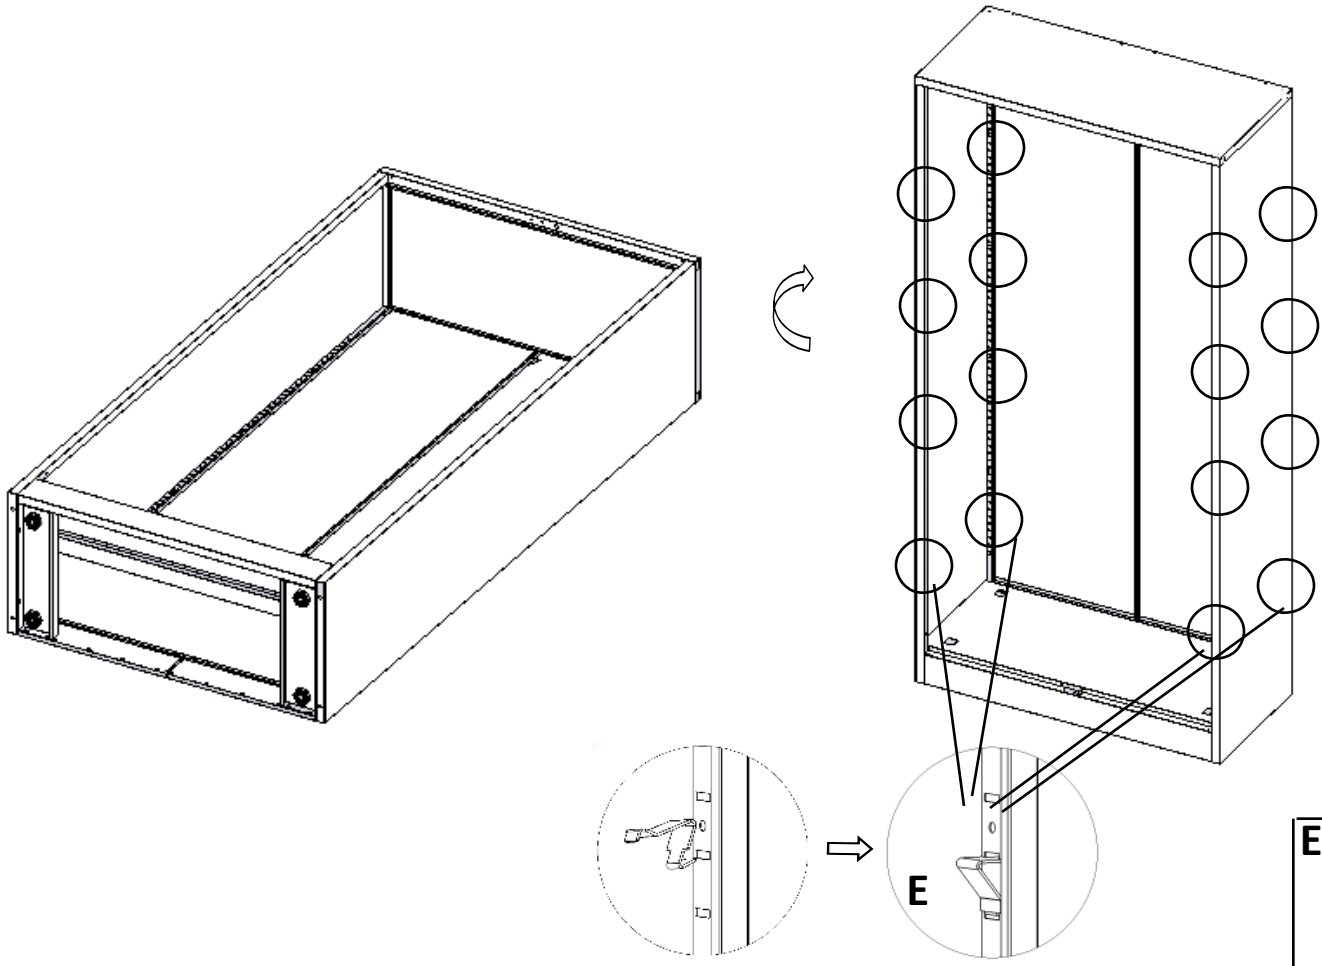

step 10

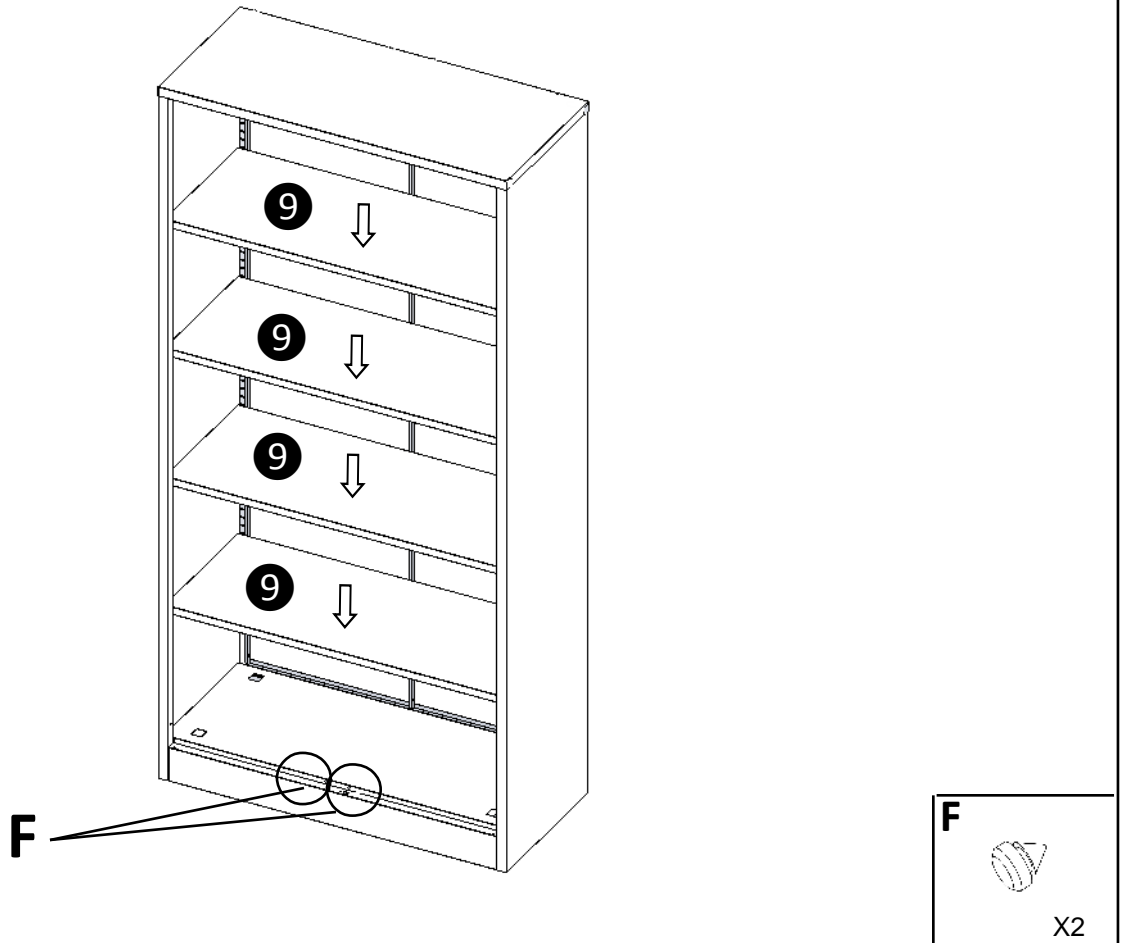

step 11

